

MediaRange  
FOLDABLE WIRELESS KEYBOARD  
WITH 63 KEYS AND TOUCHPAD

DE Bedienungsanleitung und Anwendungs- und Sicherheitshinweise

EN User manual and operating- and safety instructions



FOLDABLE KEYBOARD WITH  
63 KEYS AND MULTIFUNCTIONAL  
TOUCHPAD FOR MOBILE DEVICES

Suitable for Bluetooth enabled devices  
e.g. smartphones, tablets and laptops

Item no.: MROS133

Keyboard layout shown on this packaging may vary from product inside. Please see label on the packaging for details.  
This manual refers to all available layouts of this keyboard model.



TECHNICAL DATA

 
 
Description	Foldable wireless keyboard with touchpad, silver
Power ranting and connection	Lithium polymer battery with 140mAh I 3.7V I 0.518Wh; micro USB port: DC 5.0V/0.5A;
Connection	Bluetooth 3.0 up to 10 m, Class 2; Compatible with Windows, iOS, macOS, Android
Size I Weight	305 x 98 x 8 mm (open) I 198 g
Frequency range and shift	2402 MHz to 2480 MHz I GFSK
Radio-frequency power transmitted	0.52 dBm EIRP MAX
Antenna gain	1.87 dBi MAX
Operating- and storage conditions	Operating temperature from -15 °C to +45 °C; relative humidity from 20 % to 95 % (non-condensing)

\* The touchpad can't be operated by iOS devices.

DECLARATION OF CONFORMITY

Hereby MediaRange GmbH, Zum Quellenpark 29, 65812 Bad Soden a.Ts., Germany declares that the product „MediaRange Foldable wireless keyboard with touchpad, silver, Item no.: MROS133“ complies with European directive(s) 2014/53/EU. The detailed declaration of conformity for this product is available at:  
[www.mediarange.de/en/support/downloads/index.pmode](http://www.mediarange.de/en/support/downloads/index.pmode)

SCHNELLSTART / QUICKSTART / GUIDE DE DÉMARRAGE RAPIDE

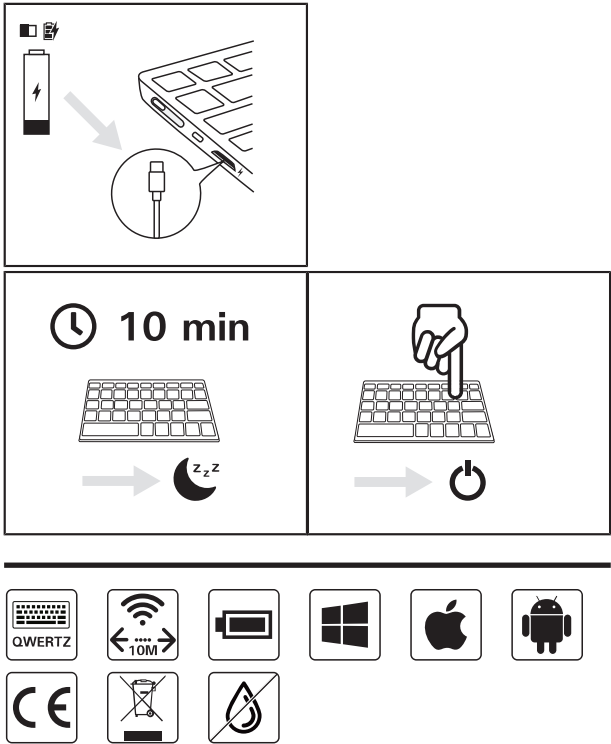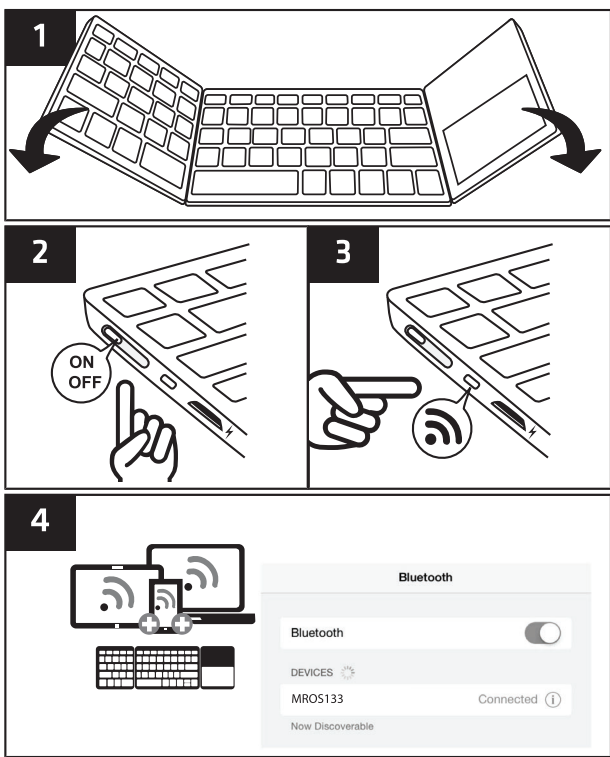

DEUTSCH - BEDIENTUNGSANLEITUNG

Lesen Sie die Bedienungsanleitung, insbesondere die Sicherheitshinweise, sorgfältig durch, bevor Sie das Produkt benutzen. Bewahren Sie die Bedienungsanleitung und Sicherheitshinweise für die weitere Nutzung auf. Bei der Weitergabe des Produkts die Bedienungsanleitung und die Sicherheitshinweise vollständig mitliefern.

LIEFERUMFANG

- Faltbare Funk-Tastatur mit Touchpad, silber; MROS133
- USB-Ladekabel
- Bedienungsanleitung und Sicherheitsanweisungen

INSTALLATION

- Die Tastatur aufklappen.
- Die Tastatur einschalten.
- Die Bluetooth-Kopplung (Pairing) einschalten.
- Das Endgerät einschalten (z. B. Tablet). Auf dem Endgerät die Bluetooth-Funktion einschalten. Aus der Liste der verfügbaren Geräte "MROS133" auswählen.

- Um die Tastatur mit einem anderen Endgerät zu verwenden, die Tastatur in den Bluetooth-Einstellungen des bisherigen Endgeräts entkoppeln. Anschließend die Installation mit dem anderen Endgerät durchführen.

ANZEIGEN



FUNKTIONEN

Energiesparmodus

Die Tastatur schaltet nach 10 Minuten in den Energiesparmodus. Eine beliebige Taste drücken, um den Energiesparmodus zu beenden.

 
ENGLISH - SAFETY INSTRUCTIONS

Please read the user manual, especially the safety instructions carefully before using this product to ensure safe and proper use. If these instructions are not followed, you may damage this product or your device and will void your warranty. For more product information, please check the „Technical data“ in the user manual.

- This keyboard is suitable for Bluetooth enabled devices with version 3.0
- Use only charging devices that meet the required technical specifications in order to avoid malfunctions or damage to the product.
- Please make sure that the socket is always easily accessible when the keyboard is charging.
- The device may get warm during charging. This is normal.
- Do not use excessive force when connecting or removing the cable. Using excessive force may damage the cable or port.
- Do not open the product and do not attempt to repair the product yourself. Doing so puts you at risk of injury or causing damage to the device and will void your warranty.
- Do not insert any object into the port that is not designed for this purpose.
- Avoid subjecting the product to heavy shocks and protect it against impacts and falls at all times.
- Do not use the product and accessories if there is any visible damage, if it has come into contact with water or other fluids, or if it is damp.
- Keep the device out of direct sunlight and do not use in the immediate vicinity of any heat sources.
- Keep the product away from open fire: Danger of explosion!
- Keep the product away from water, other fluids and fire at all times.
- Do not use the product in extremely cold, hot, damp or dusty areas.
- Operate this product only in a dry environment between -15°C and 45°C only.
- Do not operate this product in areas and places where the use of electronic equipment is not permitted
- If you do not intend to use the product for a longer period of time, store it at a temperature between -15 and 45 degrees Celsius with a maximum relative humidity of 95% (for short periods). Fully charge the battery every three months in order to maintain battery performance.
- Obstructions, such as walls, may influence the keyboards' transmitting range. To ensure a good connection, we suggest to avoid such obstructions as good as possible and/or lower the distance during operation.
- If the product does not operate properly, turn it on again, disconnect the connection from your device and reconnect it after a moment.
- The illustrations in this manual are for descriptive purposes only and do not show a detailed description.
- Product images may vary from the actual product. The content of this user manual may be revised without prior notice.

Funktionstasten

- Unter iOS, macOS oder Android: **[FN] [SHIFT]** + Schnelltaste
- Unter Windows: **[FN]** + Schnelltaste

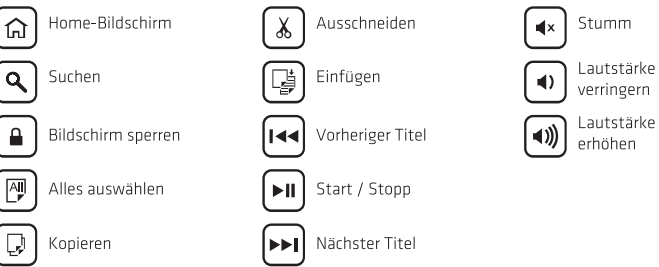

TECHNISCHE DATEN

Beschreibung	Faltbare Funk-Tastatur mit Touchpad, silber; MROS133
Stromversorgung und Anschluss	Lithium-Polymer Akku mit 140mAh I 3.7V I 0.518Wh; micro USB Ladebuchse: DC 5.0V/0.5A;
Verbindung	Bluetooth 3.0 bis zu 10 m, Class 2; Kompatibel mit Windows, iOS, macOS, Android
Maße I Gewicht	305 x 98 x 8 mm (geöffnet) I 198 g
Frequenzband I Modulationssystem	2402 MHz bis 2480 MHz I GFSK
Maximale Sendeleistung	0.52 dBm EIRP MAX
Antennengewinn	1.87 dBi MAX
Betriebs- und Lagerbedingungen	Umgebungstemperatur -15 °C bis +45 °C; relative Luftfeuchte 20 % bis 95 % (nicht kondensierend)

\* Die Touchpad-Funktion steht unter iOS nicht zur Verfügung.

KONFORMITÄTSERKLÄRUNG

Hiermit erklärt MediaRange GmbH, Zum Quellenpark 29, 65812 Bad Soden a.Ts., Deutschland, dass das Produkt „MediaRange faltbare Funk-Tastatur mit Touchpad, silber, Art. Nr. MROS133“ der/den Richtlinie(n) 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:  
[www.mediarange.de/de/support/downloads/index.pmode](http://www.mediarange.de/de/support/downloads/index.pmode)

ENGLISH - USER MANUAL

Please read the user manual, especially the safety instructions carefully before using this product to ensure safe and proper use. If these instructions are not followed, you may damage this product or your device and will void your warranty.

PACKAGE CONTENTS

 
- Foldable wireless keyboard with touchpad, silver
- USB charging cable
- User manual and safety instructions

GETTING STARTED AND OPERATION

- Unfold the keyboard.
- Turn the keyboard on
- Enable Bluetooth (Pairing).
- Enable Bluetooth on your device and search for „MROS133“ to connect your device with the keyboard.

- To use the keyboard with an other device, disconnect the previously connected device. Connect another device by following the steps 1 - 4 as above.

INDICATORS

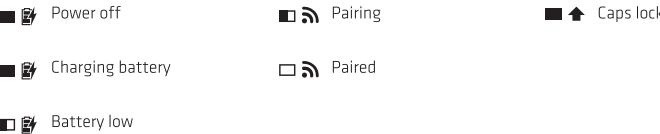

FUNCTIONS

Stand-by mode

The keyboard turns to stand-by after 10 minutes. Wake up the keyboard by any key.

Function keys

- By iOS, macOS or Android: **[FN] [SHIFT]** + Function key
- By Windows: **[FN]** + Function key

- To improve products performance, the content of this user manual may be revised without prior notice.
- The mode of operation in here, is depending on the device and may work differently as described.

CARE AND CLEANING

- Switch off the device before cleaning and use a slightly damp lint-free cloth to clean the product only and do not use any aggressive cleaning agent
- When cleaning, ensure that no water or other liquids get into the connections or the product.

DISPOSAL

All the old batteries and all electrical devices and used electrical equipment must be disposed of separately from household waste over the appropriate government agencies. Proper disposal of old batteries and electronic equipment helps avoid environmental damage. You are responsible to delete sensitive / personal data. Remove batteries from product, when possible.

DISCLAIMER

MediaRange GmbH will not be held liable for the loss of data on devices sent to us. All brands and product names referenced in this user manual are property of their respective owners and referred to for descriptive purposes only.

CONTACT

MediaRange GmbH, Zum Quellenpark 29, 65812 Bad Soden a.Ts., Germany.  
Tel.: +49 (0) 6196 523 81 80, Mail: [info@mediarange.de](mailto:info@mediarange.de), URL: [www.mediarange.de](http://www.mediarange.de)

Copyright© 2021 MediaRange GmbH. MediaRange and the MediaRange logo are registered trademarks of MediaRange GmbH. Android and the Android logo are registered trademarks of Google LLC. macOS, iOS and the Apple-Logo are registered trademarks of Apple Inc. Windows and the Microsoft-Logo are registered trademarks of Microsoft Inc. Bluetooth wordmarks and logos are property of Bluetooth SIG Inc.



MediaRange GmbH  
Zum Quellenpark 29  
D-65812 Bad Soden a.Ts.

[www.mediarange.de](http://www.mediarange.de)

Made in China  
Doc version 07-2021/1,0 - 70